



ICE MERCHANDISER DEFROST TIMER REPLACEMENT

Required supplies:

- Ice Merchandiser defrost timer
- ¼" nut driver
- Small step ladder
- Slot head screwdriver
- Phillips head screwdriver
- Needle nose pliers
- Towel/cardboard/covering to prevent scratches on the finish

Click the image
to order a
defrost timer



STEP 1: Pull the unit away from the wall and unplug it from the power supply.

STEP 2: Set up a small step ladder to allow easy access to the defrost timer.

STEP 3: Put down a towel or other cover to protect the finish of the merchandiser.

STEP 4: Using a ¼" nut driver, remove the screws to release the compressor cover. Set the cover and screws aside.

STEP 5: Identify the defrost timer and detach the wires. Using the needle nose pliers, grip the wires close to the timer's terminal to pull them off.

STEP 6: Using a Phillips head screwdriver, remove the mounting screws to release the defrost timer. Set the screws aside to use when installing the new defrost timer.

STEP 7: Remove and discard the defective defrost timer from the merchandiser.

STEP 8: Install the new defrost timer. Line the defrost timer with the mounting holes and re-install the screws using a Phillips head screwdriver.

STEP 9: Re-connect the wires to the timer terminal. Using the diagram included with the new timer, attach wires.

TEST STEP 10: Re-connect the unit to the power supply. The unit should kick on and run.

TEST STEP 11: Use a slot head screwdriver to turn the timer clockwise until you hear a click and the compressor shuts off.

TEST STEP 12: Check compressor at a 15 minute cycle. At 15 minutes, the compressor should power on and the unit should start cooling.

STEP 13: Remove the merchandiser from the power source.

STEP 14: Perform a maintenance check. Inspect the condensing coil for dirt and dust. A dirty coil restricts air flow to the cool the compressor and may shorten the compressor life. Use a coil brush, compressed air or a vacuum to clean the coil.

STEP 15: Reinstall the compressor cover. Set the compressor cover in place and install screws using the ¼" nut driver.

Rather view our instructional video?

www.youtube.com/icemaideasy

Or, contact us for support at:

**1-800-ICE MAID • www.icemaid.com
help@icemaid.com**

